nextar™

3.5 INCH DIGITAL PHOTO FRAME

See Things Differently™

N3-501

QUICK START GUIDE

ACCESSORIES LIST



USB Cable

USB AC Adaptor

Stand

3 Interchangeable Frame
Black,White & Silver

STEP BY STEP CONNECT THE DEVICE

STEP 1

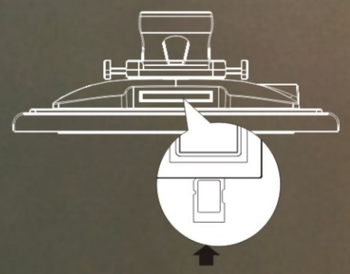

Insert SD/MMC/MS
card with Jpeg format files

STEP 2

Connect USB Cable to USB Adaptor

STEP 3

Connect to the wall outlet
via USB AC adaptor

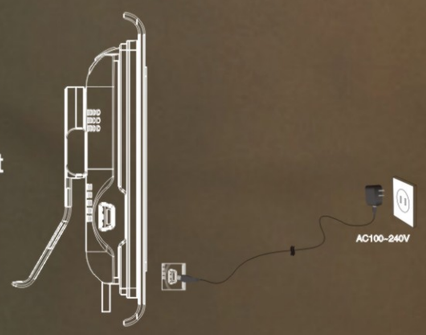

UNIT VIEW DESCRIPTION

FRONT VIEW

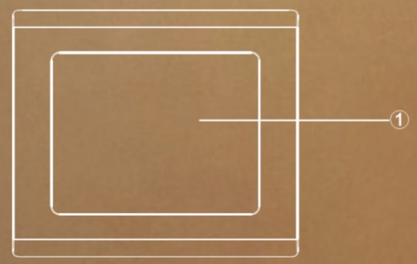

1.LCD Screen

TOP VIEW

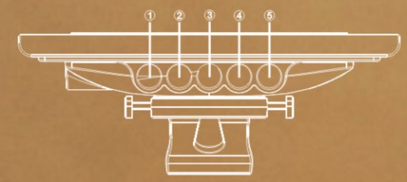

1.Enter Button
To display your selected picture

2.Down button
Move down to highlight the different pictures

3.Up button
Move up to highlight the different pictures

4.Right button
Move right to highlight the different pictures

5.Left button
Move left to highlight the different pictures

BACK VIEW

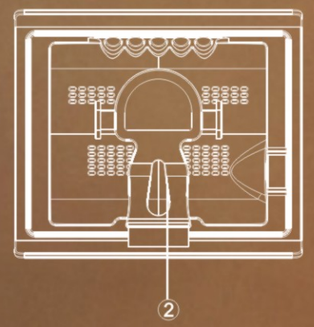

2. Attach the stand to the back of the frame

SIDE VIEW

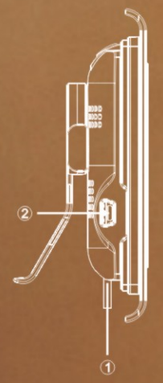

1.SD/MMC/MS Card Slot

Insert SD/MMC/MS card into this slot.

2.USB Port

Connect the supplied adaptor with USB cable.

Safety Advice

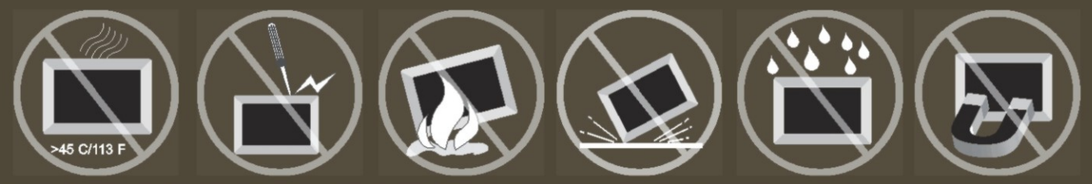

As with any digital media-based storage device, data should be backed up regularly. We strongly recommend that you observe the usage precautions laid out in this instruction, and also back up the data in your player regularly. In not event will Nextar be liable for any indirect, incidental, special or consequential damages to any persons caused by Nextar's negligence,or for any lost profits, lost savings, loss of use, lose revenues or lost data arising from or relating to this device, even if Nextar has been advised of the possibility of such damages.In no event will Nextar's liability or damages to you or any other person ever exceed the amount paid by you for the device, regardless of the form of the claim. Some countries/states do not allow the limitations or exclusion of liability for incidental or consequential damages, so the above limitation or exclusion may not apply to you.